
WINDOWART

How to Install

For Fly-screen(Pleated Style)

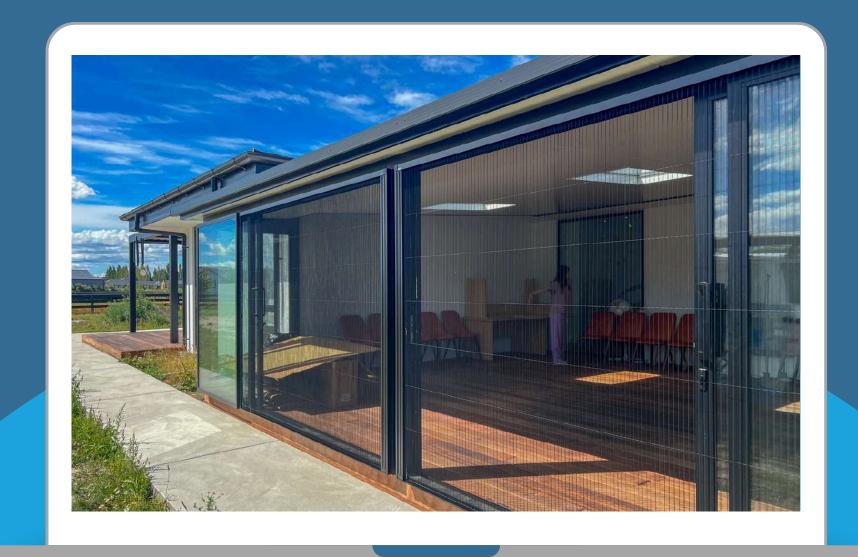


• Assembling the Insect Screen Frame

Check 1

Check 2

You can use either side of the aluminum frame for the top and bottom rails. The two side aluminum frame has a front and back side. The smooth side is the front, and the grooved side is the back, which attaches to the window.

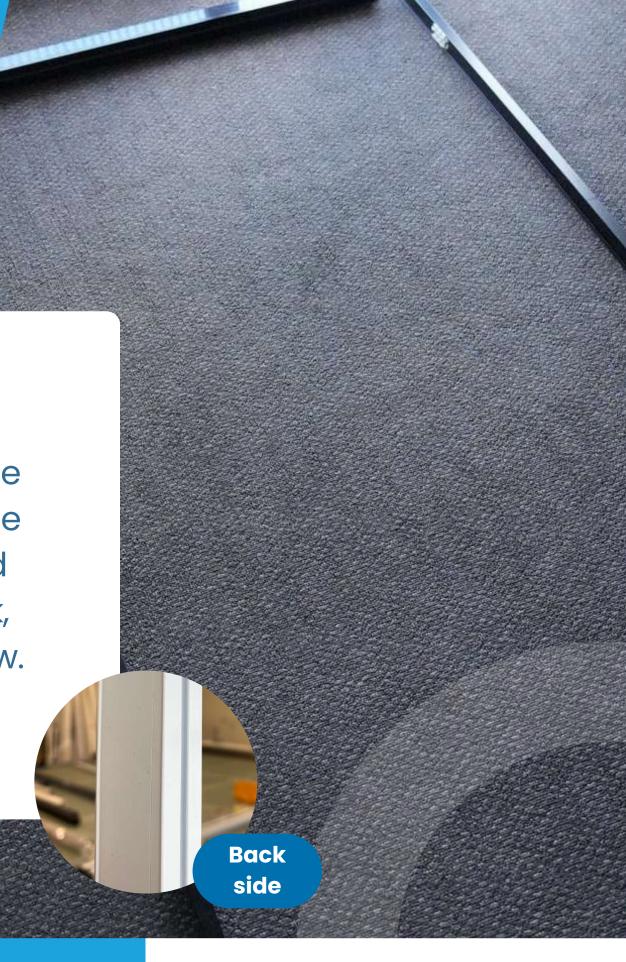

Installing the
 Assembled Frame

Check

Place the assembled insect screen frame onto the intended door frame(or window frame) and secure it.

• Checking the Direction of the Screen part

Check

Confirm the top, bottom, front, and back side of the insect screen before installation.



Checking the Strings

Check 01


Place the aluminum frame with the mesh opening side and the magnetic side facing outward.



Check 02


Ensure the four strings are divided into two sets, running parallel to each other.

(4 strings each side top & bottom)

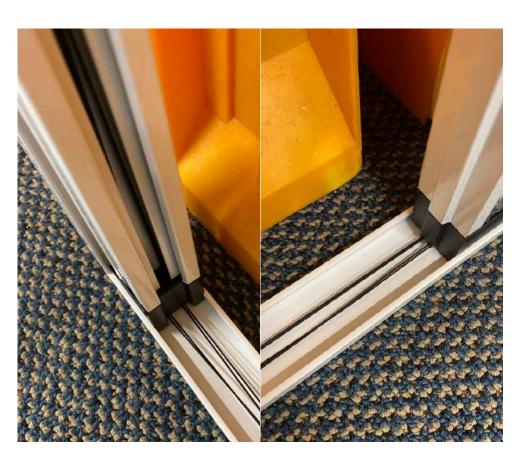

Check 03


Check that the strings are properly aligned in the middle before securing the aluminum frame.

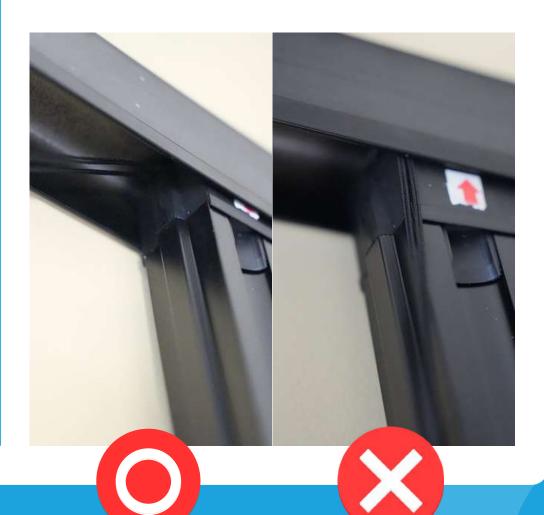

• Ensuring Proper Installation

Check

Verify that the insect screen is correctly aligned and securely placed within the rails.

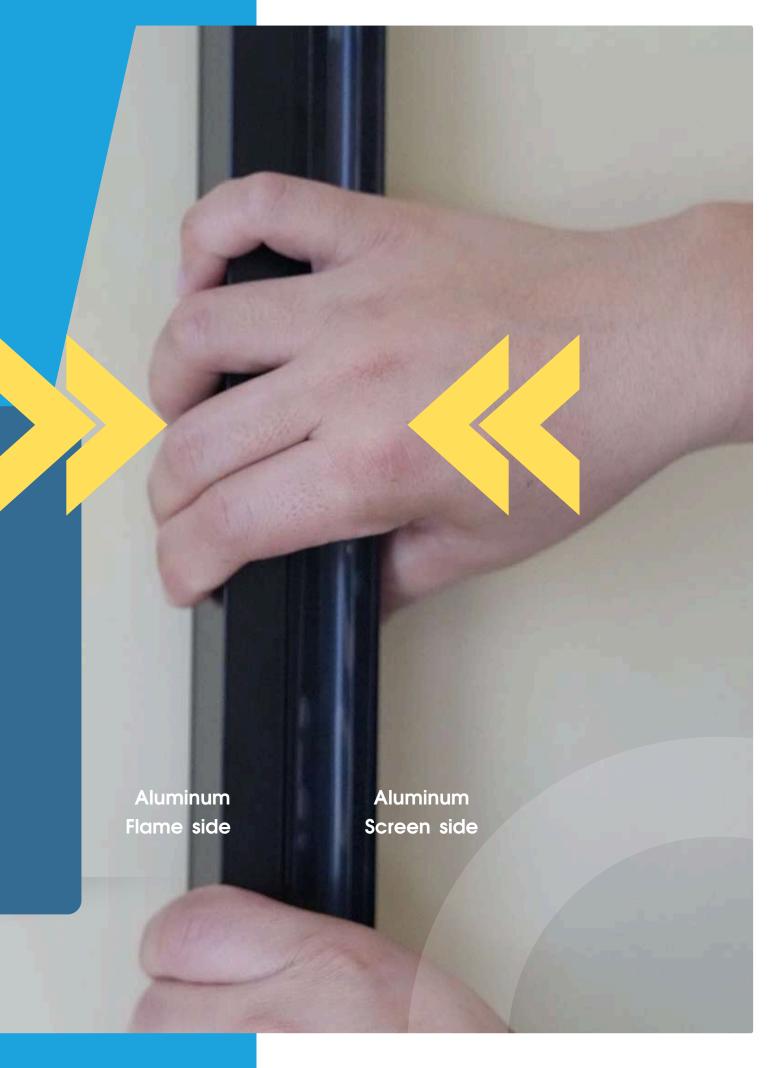

Operating the screen

Check

Open and close the door several times to help the strings and mesh settle into position.

*Forcing the door open or closed with tangled strings may cause the strings to snap.

*Ensure that the four strings at the top and bottom

are divided into two parallel sets before use.

• Regular Maintenance

Check 1

Check 2

Once a month, spray silicone lubricant on the top and bottom rails.

Regularly clean dust from the bottom rail to ensure smooth operation.

If the mesh becomes creased, restore it to its original shape as soon as possible. Prolonged creasing may result in permanent deformation of the material.



WINDOWART

THANKYOUS

Thank you for choosing us.

- 021 0243 0664
- www.windowart.co.nz
- 9/40 Hayton Road, Wigram, Christchurch, 8042