

WINDOWART

How to Remove

For Roller blinds & Screens




- **Identify the Brackets**


Check 1

The roller blind is supported by two brackets: one fixed bracket with a cross-shaped slot, and one bracket with a spring-loaded pin.

Cross-Shaped slot

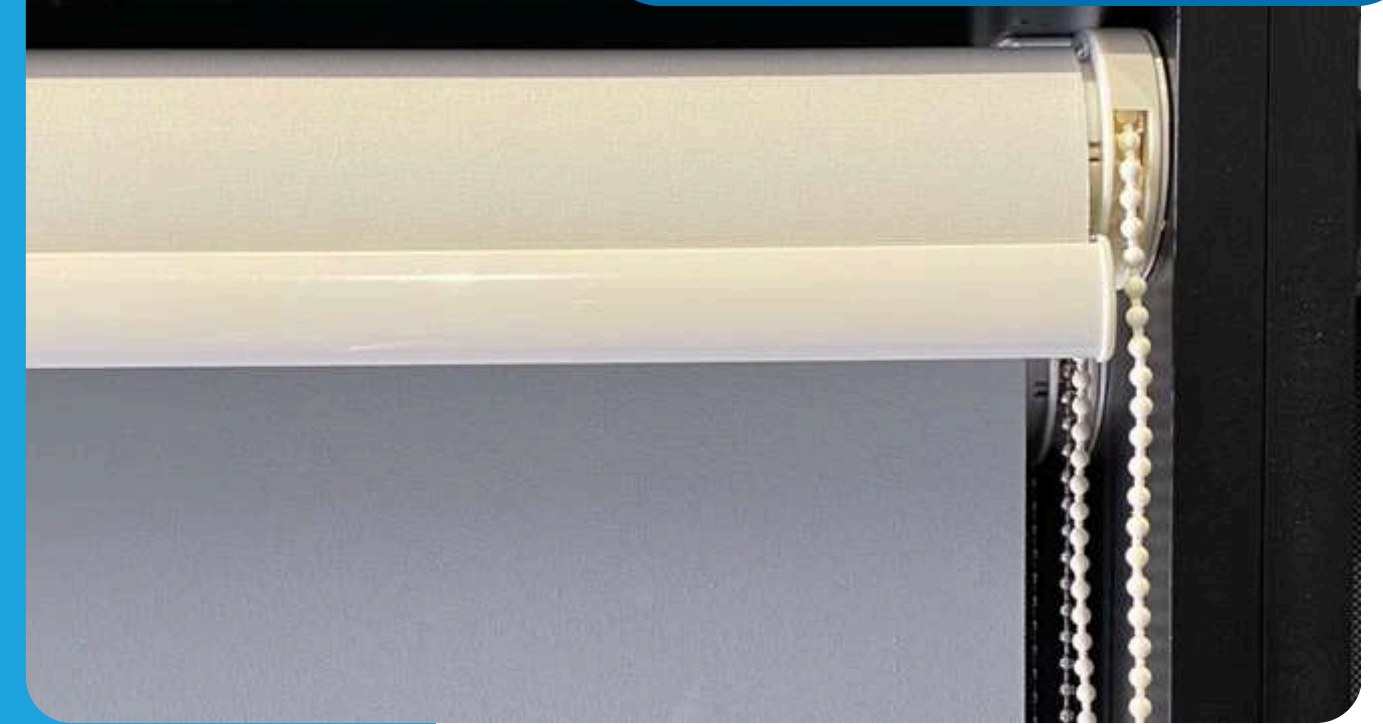

Spring pin side

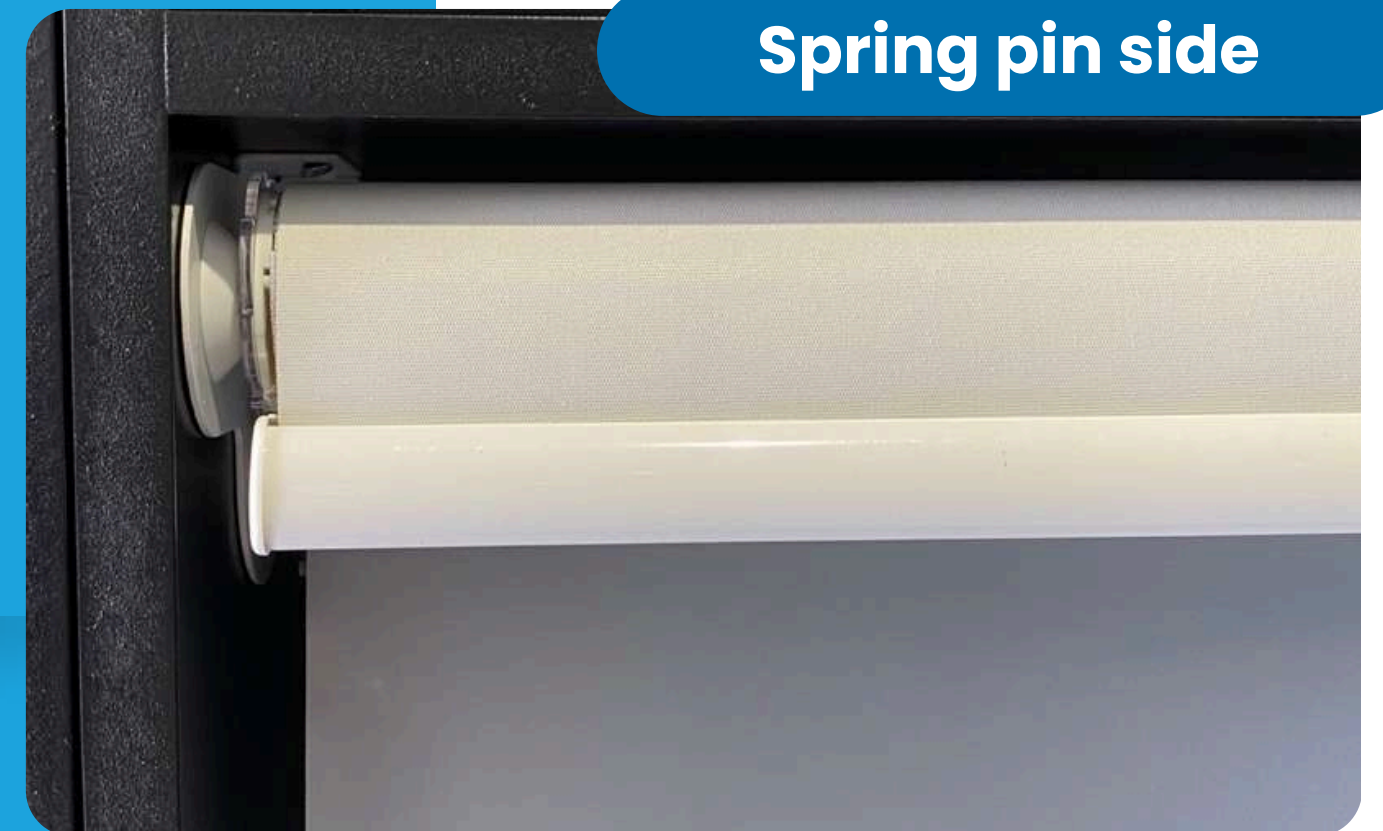

- **Release the Pin Side**

Check

**At the spring-loaded bracket,
locate the plastic wheel mechanism.
Rotate the plastic wheel so that the pin
retracts into the mechanism.**



- **Remove the Blind**

Check

**While holding the blind securely,
move the blind slightly toward the pin side
to free the opposite end from
the cross-shaped bracket and carefully lower the
blind away from both brackets.**



WINDOWART

THANK YOU!

Thank you for choosing us.



021 0243 0664



www.windowart.co.nz



103B Main South Road, Sockburn,
Christchurch